







M and L Series Metering Valves
Stem Guide Ring / Packing Adjustment

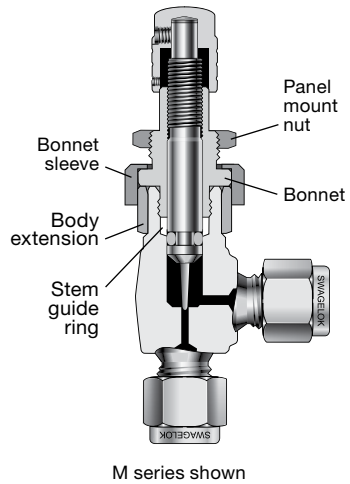

Cutaway View




Tools Required

Tool	Size	Part
		
Open-end wrench	11/16 in.	Panel mount nut
		
Crow's foot	5/8 in.	Bonnet
		
Torque wrench, capable of:	30 in. · lb (3.4 N · m)	Bonnet


⚠ WARNING
 Before servicing any installed valve, you must
 • depressurize system

⚠ WARNING
 Residual material may be left in the valve.

1. Relieve system pressure.
2. Actuate the valve to full open position.

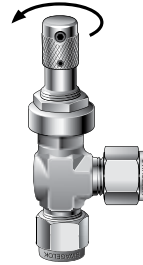


3. Loosen and remove the **panel mount nut**.

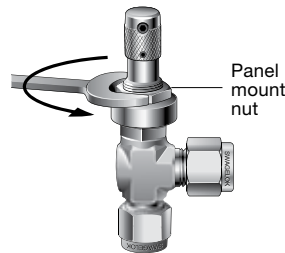


4. Remove the **bonnet sleeve**.




5. Tighten the **bonnet hex** to 25 to 30 in. · lb (2.8 to 3.4 N · m).

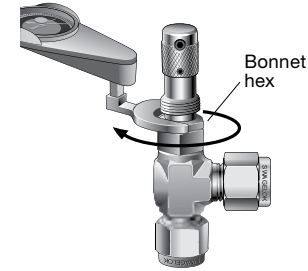

6. Slide the **bonnet sleeve** over the bonnet and the body extension.

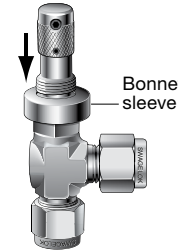

7. Replace the **panel mount nut** and tighten it against the **bonnet sleeve**.

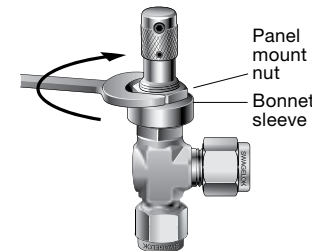

8. Test product prior to installation in the system.

Translations are available on
www.swagelok.com

Swagelok—TM Swagelok Company
 © 1997, 2009 Swagelok Company
 Printed in U. S. A. CP
 November 2009, R1
 MS-CRD-0018