
# HOW TO ORDER HOSE ASSEMBLIES

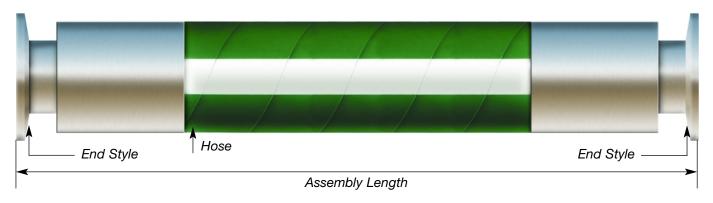

**Example:** 

16 RFRT 16TC16TC SS AR - 36in

## Hose I.D. Size In 16th of inch

02 = .125" 04 = .250" 06 = .375" 08 = .500" 12 = .750" 16 = 1.00" 20 = 1.25" 24 = 1.50" 32 = 2.00" 40 = 2.50" 48 = 3.00" 64 = 4.00" 96 = 6.00" 128 = 8.00"

### **RF Hose Type**

**RFST RFSTB RFRT RFRTC RFCTLP RFFDA RFFDAE RFCR RFCF RFSC RFSB** RFS4P **RFSV RFPC RFPB RFPVV RFPVW RFPCM RFPBM RFSG RFCSG RFFTSG RFPSSG RFSSHT RFSSH** 

**RFSSMOH** 

# Size and Style of Fitting Ends

TC = Sanitary Clamp MTC = Mini Sanitary Clamp MXTC = Maxi Tri-Clamp BSN = Bevel Seat Nut MBS = Male Beat Seat Threaded JPM = John Perry Male JPF = John Perry Female FIL = Female I-Line® MIL = Male I-Line® QL = Q-LineLJF = Lap Joint Flange BWT = Butt Weld Tube BWP = Butt Weld Pipe MPT = Male Pipe Thread FPT = Female Pipe Thread FCL = Female Cam and Groove MCL = Male Cam Lock FJIC = Female J.I.C MUA = Male Union Adapter FUA = Female Union Adapter CTA = Compression Tube Adapter TC = Tube Connector

CTCFN = Compression Tube Connector Ferrell and Nut CTAFN = Compression Tube

Adapter Ferrell and Nut BB = Hose Barb x Hose Barb

## Fitting Material

SS = 316L Stainless Steel

K = Kynar®

> T = PTFE

Encapsulated

HC = Hastelloy C

CS = Carbon Steel

Polypropylene

M = Molded

SSFL = SS Flare Thru

MO= Monel

### Accessory

AR = Armor AC =

Armor Cuff

SL = Silicone Cover

PO = Polyolefin Cover

SB = Stainless Braid

FS = Fire Sleeve

SG = Spring Guard

ST = Shrink PTFE

D = Donut

CS = Carbon Steel 150# Flanges

S6 = 316 SS -150# Flanges

O = Oxygen Cleaned

#### Overall Assembly Length in Inches

Overall length tolerances for assemblies are:

1/4" on assemblies to 24"

1/2" on assemblies

1/4" to 60"
1.0" on assemblies

1.0" on assemblies over 60"

**Warranty:** This product is warranted for a period of 180 days from the date of delivery to purchaser to be free from defects of material and workmanship when used in a normal manner, and excludes all implied warranties, including those of merchantability and providing periodic inspection is conducted to maintain Good Manufacturing Practices. The liability of the Warrantor hereunder excludes consequential damage to persons or property of all types and is limited, at warrantor's option, to replace or repair or refund, as applicable. Purchaser should make written claim to warrantor to commence warranty adjustment procedures. Upon warrantor's receipt of written notice from purchaser, within the warranty period that claim is being made, pursuant hereto together and substantiating purchase documentation, Warrantor shall have reasonable opportunity to inspect all assembly components.



P.O. Box 626 • Andover, NJ 07821 phone: 973-579-2959 fax: 973-579-7275

www.rubberfab.com